

R18 Desktop Keyboard and Mouse

SETUP

1. Remove the battery door on the underside of the keyboard.
 2. Insert two AA alkaline batteries (included) into the battery compartment, observing correct polarity.
 3. Replace the battery door.
 4. Remove the battery door on the underside of the mouse.
 5. Insert two AAA alkaline batteries (included) into the battery compartment, observing correct polarity.
 6. Replace the battery door.
 7. Turn on the power switch on the underside of the mouse.
 8. Plug the receiver dongle into a port on your computer. If available, choose a USB port on the front or side, rather than the rear, of the computer.
2. While the receiver LED is blinking red, press-and-release the black button on the underside of the keyboard. The receiver LED blinks green, then stops blinking to show that the keyboard is connected.
 3. Press-and-release the transparent button on the receiver dongle again.
 4. While the receiver LED is blinking red, press-and-release the rubber Connect button on the underside of the mouse. The receiver LED blinks green, then stops blinking to show that the mouse is connected.

OPTIONAL: RE-CONNECT KEYBOARD AND MOUSE WITH RECEIVER

Your R18 Wireless Desktop Keyboard and Mouse work immediately out-of-the-box on a factory pre-selected channel/ID. Should you wish to re-connect them so that a different channel/ID is used, follow these steps:

1. Press-and-release the transparent button on the receiver dongle.

OPERATION

The R18 Desktop Wireless Keyboard and Mouse is designed to operate reliably at distances of 10 feet (3 meters). Operating range varies depending on positioning of the receiver and keyboard, nearby sources of interference and other environmental factors.

Pressing a key or moving the mouse makes the receiver LED blink green.

The 16 silver multimedia keys on the keyboard function only if your computer is running Windows XP Media Center or Windows Vista.

The R18 Mouse includes a power switch. To extend battery life, turn this switch off when the mouse is not in use.



TROUBLESHOOTING

Key presses and mouse moves don't get to computer

- Ensure that the computer is powered on and the receiver is connected to the computer
- Unplug receiver and plug it into the computer's USB port again.
- Re-connect keyboard and mouse with receiver.
- Be sure a program is running that responds to the keystrokes you are typing.
- Ensure the keyboard/mouse and receiver are no more than 10 feet apart.

Keyboard works, but mouse does not work

- Ensure the mouse's power switch is in the on position.
- Re-connect mouse with receiver.
- Replace batteries in the mouse.

Mouse works, but keyboard does not work

- Re-connect keyboard with receiver.
- Replace batteries in the keyboard.

Cursor moves by itself or keystrokes appear from nowhere

- Your receiver is within range of another device on the same channel/ID. Re-connect keyboard and mouse with computer.

FOR FURTHER ASSISTANCE

Visit www.wireless-computing.com/support or call customer support at 512.263.2205 between 9:00 - 5:00 Central Time.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ADDITIONAL INFORMATION

For use with UL Listed, CSA approved personal computers. Not intended for use in machinery, medical or industrial applications. Do not use in aircraft or hazardous locations.

Caution: Any changes or modifications not expressly approved by Wireless Computing could void your authority to operate this device. No parts are user serviceable.