

RF-100 Presentation Remote

SETUP

1. Remove the remote's battery door.
2. Insert one AA alkaline battery (included) into the battery compartment. The direction of the battery is marked.
3. Replace the battery door.
4. Plug the receiver into a USB port on your computer. Do not place receiver on or in a metal cabinet or near other equipment and strong EMI sources.

SELECT ADDRESS

When delivered, your RF-100 operates on address zero. You may leave it on address zero, but your computer may receive and respond to signals from other Wireless Computing products that you or someone else may operate nearby. To change the address:

1. Press and release the black button on the underside of the receiver. The LED on top of the receiver begins blinking.
2. While the LED on the receiver blinks, simultaneously press-and-release the ◀ and ▶ buttons on the remote. This sets the remote and receiver to one of 65,000 random addresses. The receiver LED blinks for 30 seconds to allow you to address additional devices and use them with the same receiver.
3. If you will use your RF-100 together with a Wireless Computing keyboard, address the keyboard next. Refer to the keyboard instructions for the keys or buttons to press.

Once the keyboard is addressed, the receiver will blink for 30 more seconds to allow you to address additional keyboards, mice or remote controls. You can address them in any order.

OPERATION

Use the ◀ and ▶ buttons to go forward and back in Powerpoint slide shows.

The BlackScreen button uses a special Powerpoint feature to blank the screen. Pressing any button makes the green LED flash and the LED on the receiver blink green.

The RF-100 Presentation Remote is designed to operate reliably at distances of 100 feet (30 meters). Operating range will vary depending on positioning of the receiver and mouse, nearby sources of interference and other environmental factors.

To protect the battery from accidental discharge, the remote stops transmitting if a button remains pressed for more than 60 seconds.



TROUBLESHOOTING

The receiver LED is not lit

- Ensure that the computer is powered on and the receiver is connected to the computer
- Unplug the receiver and plug it into the computer's USB port again.

Button presses don't get through

- If neither LED on the remote flashes when you press a button, replace the battery.
- If the red LED flashes when you press a button, reposition the receiver and ensure the remote and receiver are no more than 100 feet apart. If the problem persists, re-select the address.
- If the green LED flashes when you press a button, and yet the computer does not respond, be sure a program that responds to PgDn, PgUp and "b" keys is running. Try using a Powerpoint slide show for testing

Cursor moves by itself or keystrokes appear from nowhere

- Your receiver is within range of another Wireless Computing product set to the same address. Re-select the address.

FOR FURTHER ASSISTANCE

Visit www.wireless-computing.com/support or call customer support at 512.263.2205 between 9:00 - 5:00 Central Time.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:
L7MR100 RF-100 Presentation Remote
L7MR019 RF-019 Dual Antenna Receiver

ADDITIONAL INFORMATION

For use with UL Listed, CSA approved personal computers. Not intended for use in machinery, medical or industrial applications. Do not use in aircraft or hazardous locations.

Caution: Any changes or modifications not expressly approved by Wireless Computing could void your authority to operate this device. No parts are user serviceable.