

RF-250 Wireless Keyboard

SETUP

1. Lay wrist rest and keyboard on a flat surface.
2. Position keyboard so wrist rest tabs are aligned under matching slots in keyboard's leading edge.
3. With both thumbs, gently press down on the left and right sides of the keyboard until tabs click into place.
4. Turn keyboard/wrist rest over.
5. Free touchpad cable and plug it into the PS/2 jack under the keyboard.
6. You can instead use your own PS/2 mouse with the RF-250. Unplug the touchpad, then plug your mouse into the PS/2 jack. Clip any extra mouse cable into the guides on the keyboard underside. Note: Using a PS/2 mouse reduces battery life.
7. Remove the battery door on the underside of the keyboard.
8. Insert two AA alkaline batteries (included) into the battery compartment. The batteries face in opposite directions. The directions of the batteries are marked.
9. Replace the battery door.
10. Plug the receiver into a USB port on your computer. Do not place receiver on or in a metal cabinet, or near other equipment and strong EMI sources.

SELECT ADDRESS TO ENABLE ENCRYPTION

When delivered, your RF-250 operates on address zero. You may leave it on address zero, but while on address zero, keystrokes are not encrypted and your computer may receive and respond to signals from other Wireless Computing products.

1. Press and release the black button on the underside of the receiver. The LED on top of the receiver begins blinking.
2. While the LED on the receiver blinks, press-and-release the Addr key. This sets the keyboard and receiver to one of 65,000 random addresses and enables encryption.
3. If you have a Wireless Computing mouse or remote control and wish to use it together with this keyboard, select this same address for the additional device(s). Refer to the mouse or remote control instructions for the button(s) to press. Each time you select an address, the receiver LED blinks for 30 seconds, allowing you to address an additional keyboard, mouse or remote control.

USING A MACINTOSH

To put the keyboard into Macintosh mode, press the Left-GUI, Left-Alt, Right-Alt, and Right-GUI keys together at the same time.

Next, detach the WIN (2), Alt (2), Print Screen, Scroll Lock and Pause/Break keycaps. Replace them with Option/Alt, Cmd, F13, F14 and F15 keycaps (included). See the diagram on page 2 of these instructions.

OPERATION

The RF-250 Wireless Keyboard is designed to operate reliably at distances of 100 feet (30 meters). Operating range varies depending on positioning of the receiver and keyboard, nearby sources of interference and other environmental factors.


Pressing a key or sliding your fingertip on the touchpad makes the green "sending" LED blink on the keyboard and the receiver LED blink green.

The RF-250 will sleep a PS/2 mouse after 30 minutes of inactivity to save battery power. To wake up the mouse, press any key. Note: Using a PS/2 mouse reduces battery life.

When the "low battery" LED turns on, replace the batteries as soon as possible.



SWITCHING KEYCAPS FOR MACINTOSH USE

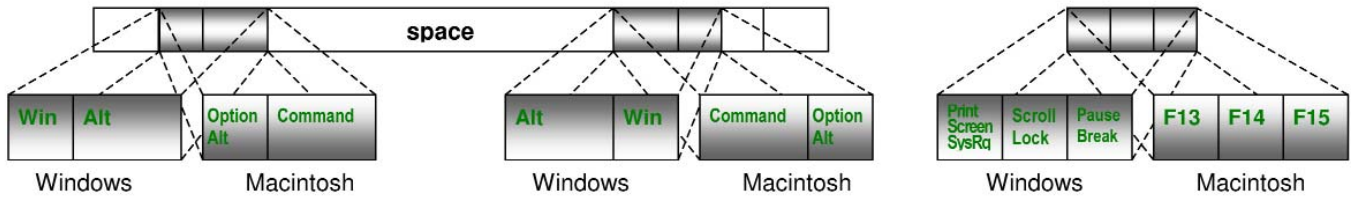

TROUBLESHOOTING

The receiver LED is not lit

- Ensure that the computer is powered on and the receiver is connected to the computer
- Unplug receiver and plug it into the computer's USB port again.

Key presses don't get to computer

- If the sending LED on the keyboard flashes all red, re-select the address.
- If the sending LED flashes green and yet the computer does not respond, be sure a program is running that responds to the keystrokes you are typing. Also, try unplugging then re-plugging the receiver.
- If the sending LED flashes mixed green and red, reposition the receiver and ensure the keyboard and receiver are no more than 100 feet apart.
- If the sending LED does not flash at all, replace the batteries in the keyboard.

Sending LED does not flash when slide finger on touchpad, or move mouse

- Ensure that the touch pad or mouse PS/2 plug is fully inserted.
- If using touchpad, press the Mouse Off key.
- If using a PS/2 mouse, press the Mouse Off key, then press the Mouse On key.
- Remove and re-insert the batteries.

Keyboard works, but other Wireless Computing devices do not

- The other devices have the wrong address. Re-select the address for all devices, including the keyboard.

Windows Start menu opens when press Alt key

- Keyboard is in Macintosh mode. Turn off Macintosh mode by simultaneously pressing Left-GUI, Left-Alt, Right-Alt, and Right-GUI.

On Macintosh, Option and Cmd keys are reversed

- Keyboard is not in Macintosh mode. Set to Macintosh mode by simultaneously pressing Left-GUI, Left-Alt, Right-Alt, and Right-GUI.

Cursor moves by itself or keystrokes appear from nowhere

- Your receiver is within range of another Wireless Computing device set to the same address. Re-select the address.

FOR FURTHER ASSISTANCE

Visit www.wireless-computing.com/support or call customer support at 512.263.2205 between 9:00 - 5:00 Central Time.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:
L7MR250 RF-250 Wireless Keyboard
L7MR019 RF-019 Dual Antenna Receiver

ADDITIONAL INFORMATION

For use with UL Listed, CSA approved personal computers. Not intended for use in machinery, medical or industrial applications. Do not use in aircraft or hazardous locations.

Caution: Any changes or modifications not expressly approved by Wireless Computing could void your authority to operate this device. No parts are user serviceable.